

# Using Elmo



9/27/2007

Prepared by instructional support  
services

# Yellow & Red A/V cables attached to Elmo [Back view--S-Video]




# Yellow & Red A/V cables attached to the wall panel [C-Video]





# Power supply to Elmo cart

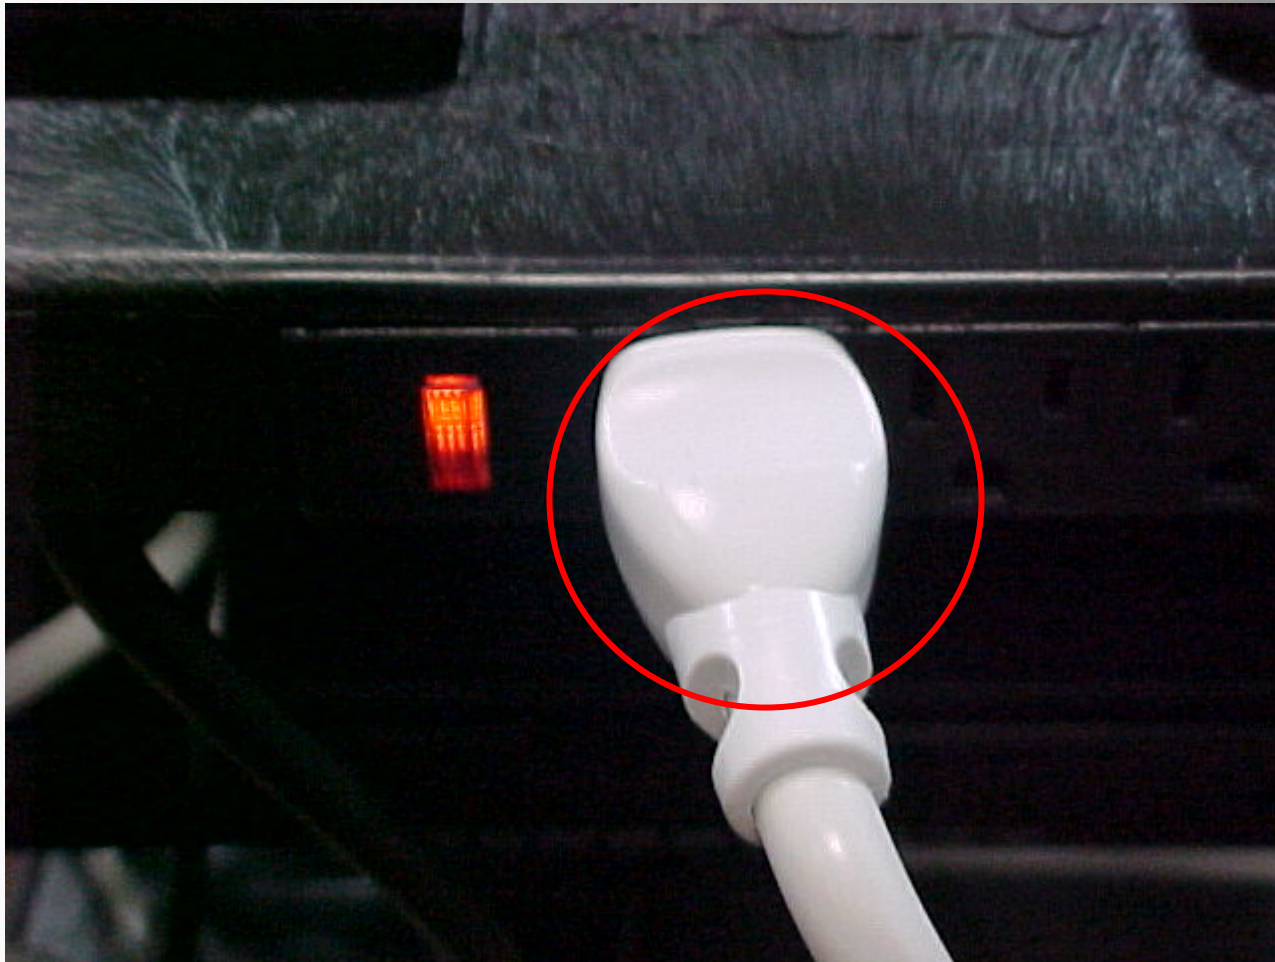

# Power supply to Elmo



# OFF / ON button





# Push 'Unlock' button to lift the camera handle



Turn on the projector & push video button—[to select input 3]





# Pull the camera handle



# Lift to open both lights



# Push [on/off]

Use **UPPER**  
option for:

1. Textbook
2. Newspaper
3. Brochure
4. Physical items



Use **BASE**  
option for:  
Transparenc  
cies



# Select 'Internal' button



# Adjust image on the screen using: Manual or Auto focus



# Select between Color or B&W





# Select positive or negative



# Manual Zoom

Closer

Wide



Now you are ready to share information with your class!

